


# Installing Stenograph Writer Drivers in Case CATalyst

## Installing Stenograph Writer Drivers in Case CATalyst


**Note:** The following instructions are for users who are using Case CATalyst version 15 and above. If you are using Case CATalyst version 14 or below click [here](#) for information on how to install the drivers.

1. Connect the writer to your computer with the **USB cable** and turn the writer on.
2. Open Case CATalyst and click on **Help, Open Device Manager (Alt + h, d)**. The **Device Manager** will appear in a separate window.

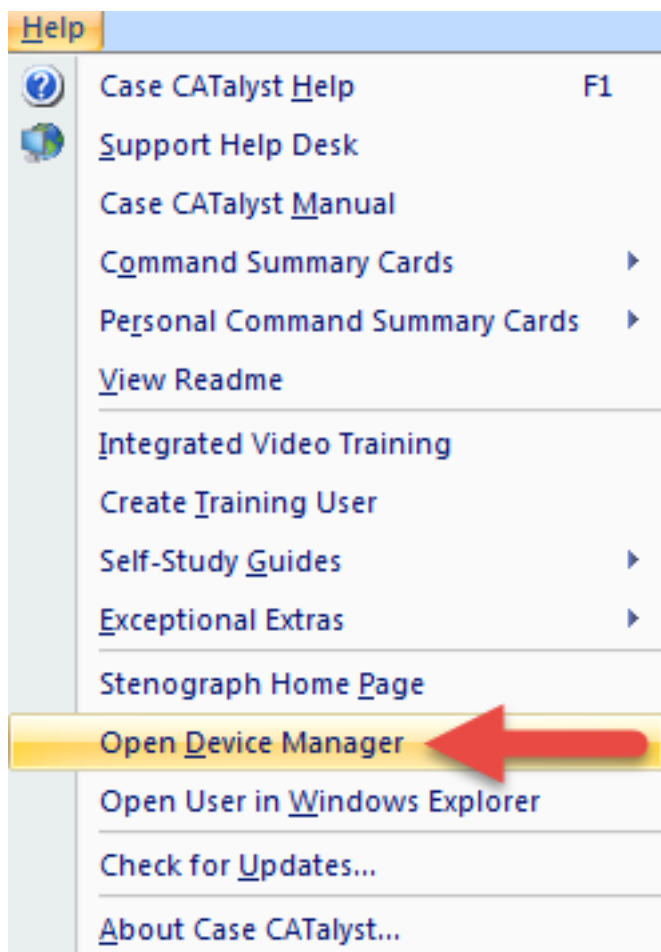


3. In Device Manager look for a category that says **Other Devices**. Below that you should see a yellow exclamation point that says **Luminex Machine, Diamante Machine, Stenograph**


**Elan Mira, or Stenograph Fusion. Right click on the yellow exclamation point and left click on Update Driver.**

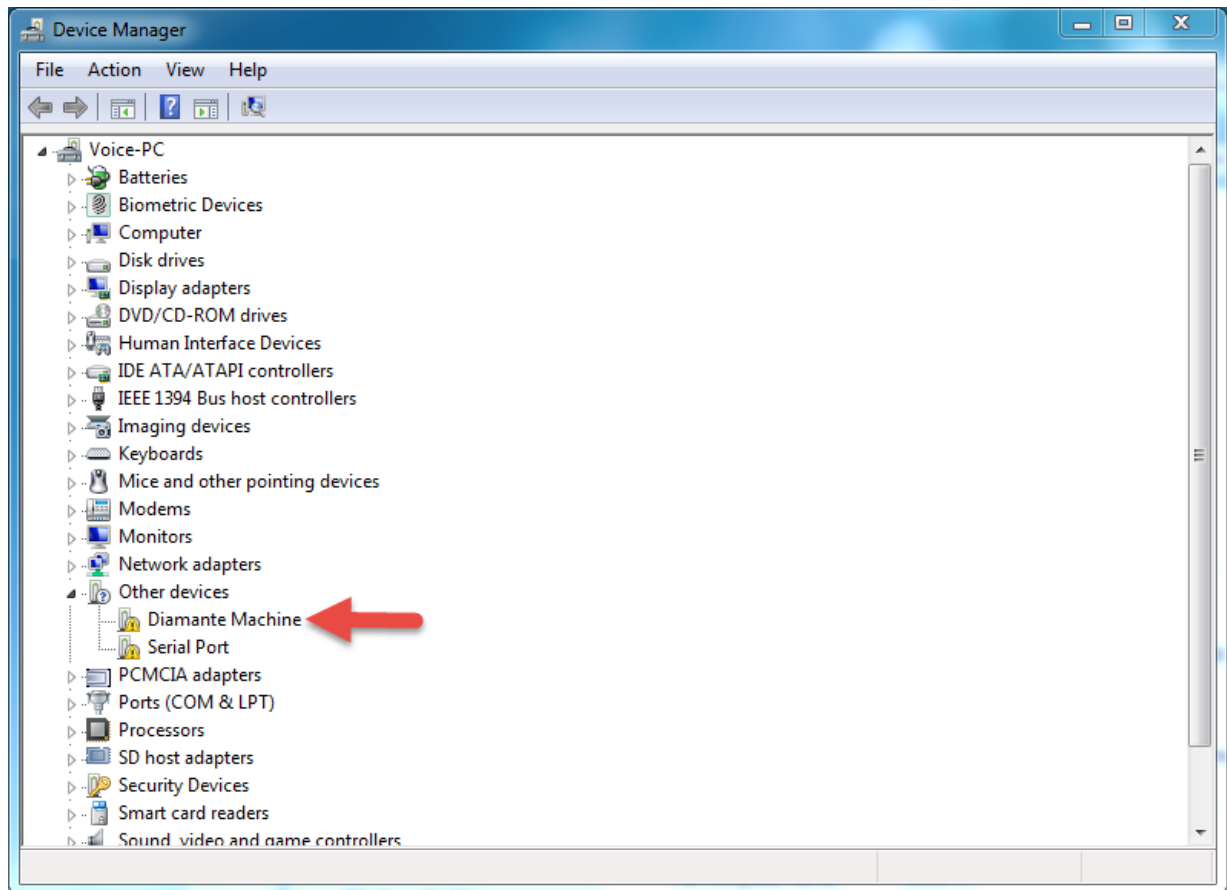


4. The **Update Driver Software** dialog window will appear. Left-click **Browse my computer for driver software**.

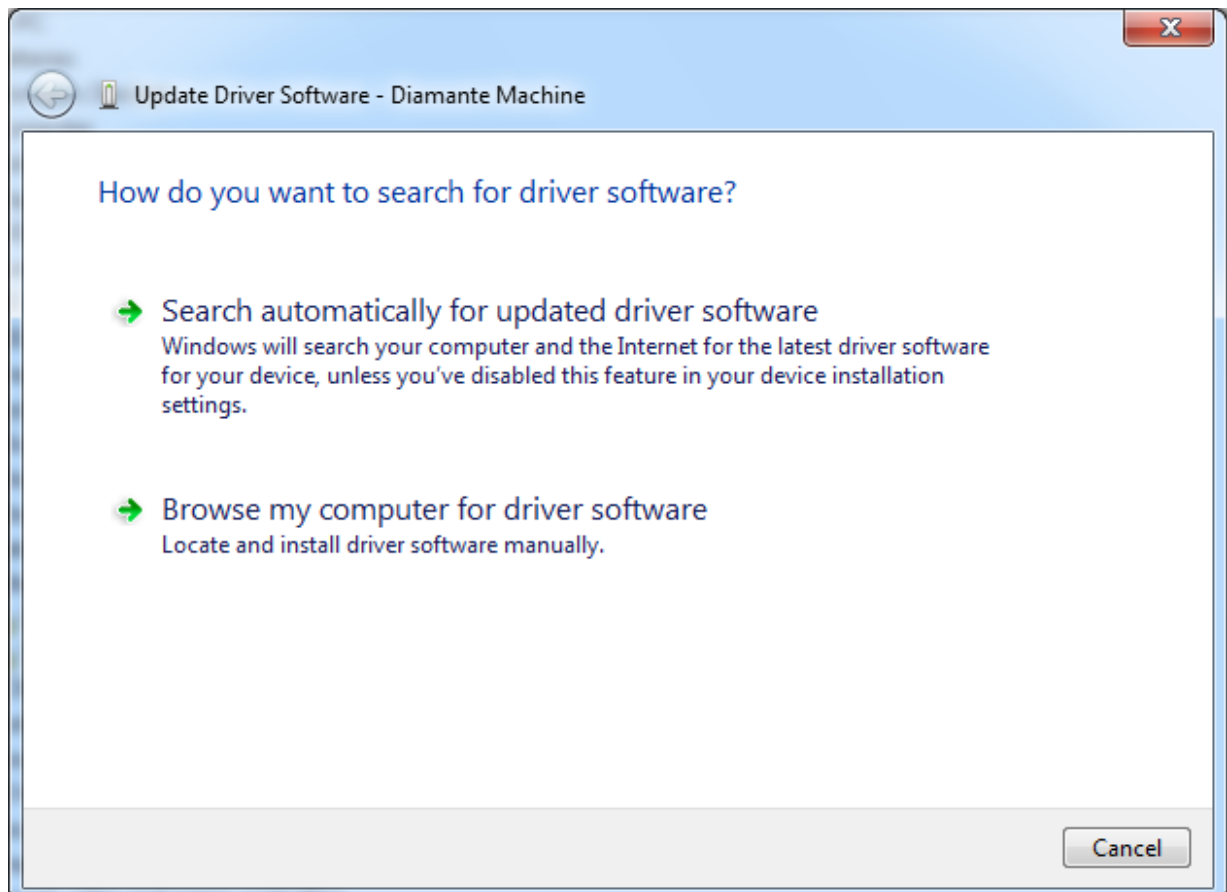


5. In the next screen type **C:\Cat4\Drivers\Writer** (or copy and paste this text) in the **Search for driver software in this location** field. Then click **Next**.

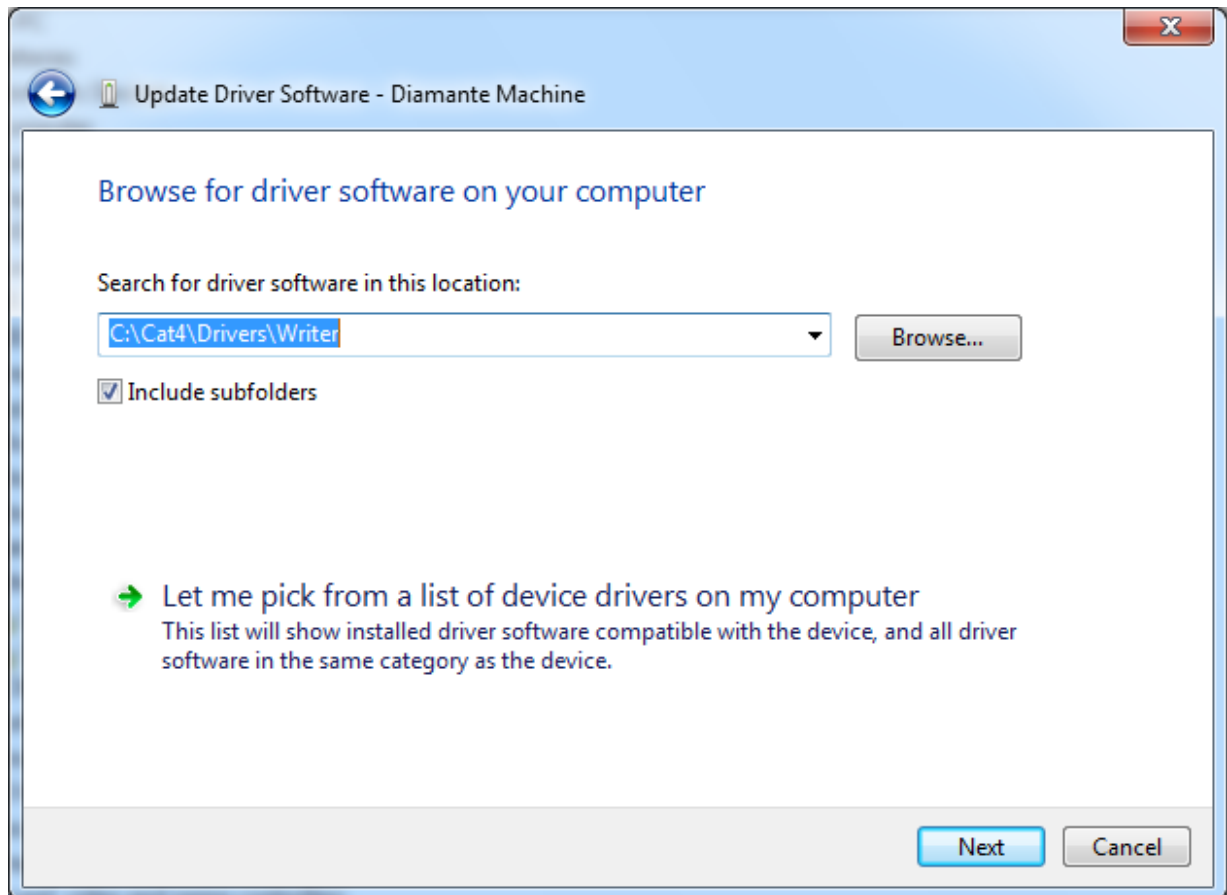


6. You will be prompted with a dialog window verifying the installation of the drivers. Click **Install**.

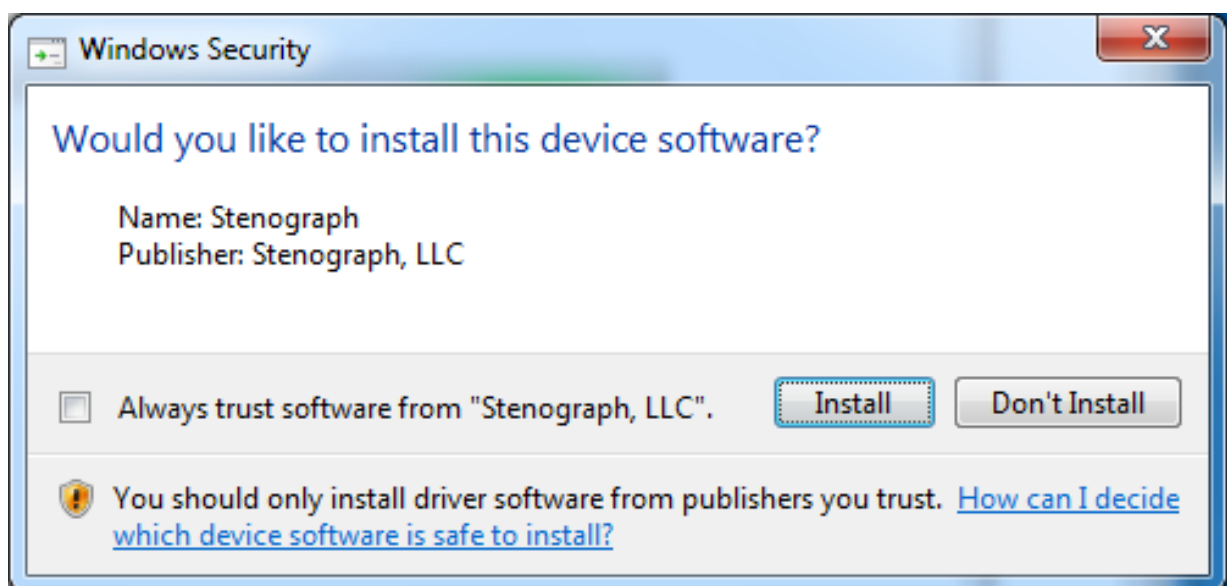

7. When your writer's USB driver has finished installing, click **Close**.

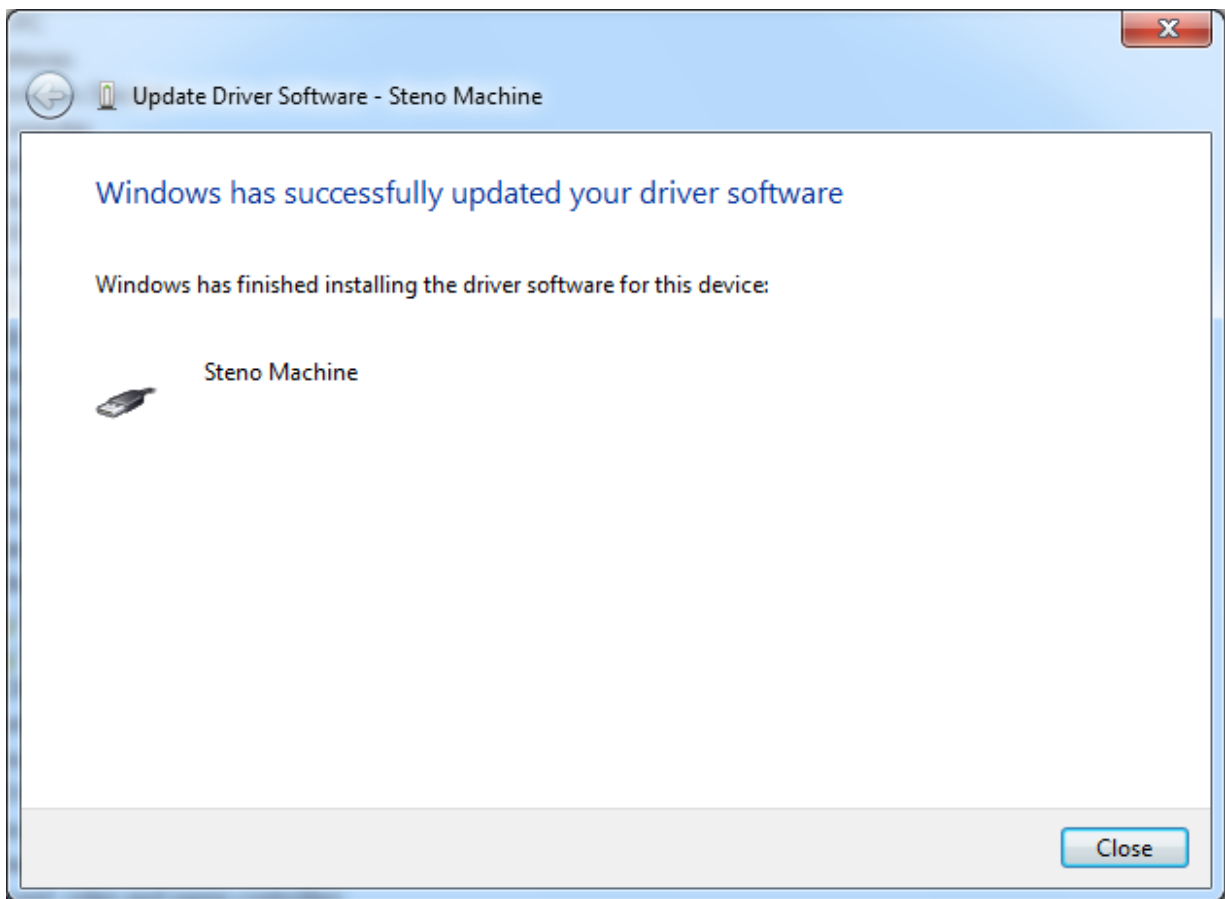

8. To confirm a successful installation has completed, a new category will appear that say Stenograph USB Writer without a yellow exclamation point next to it.

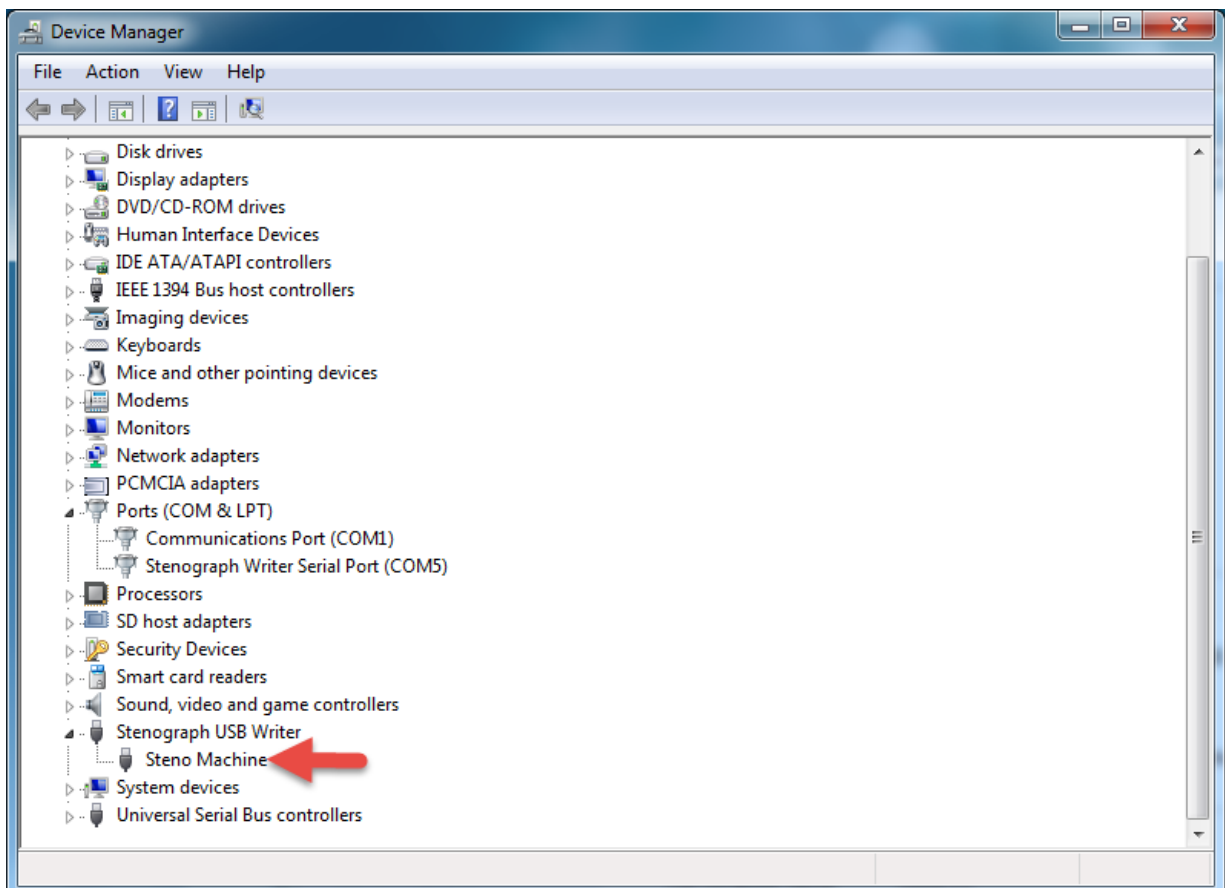

9. After installing the writer USB driver, you may get another driver installation wizard to install the **Stenograph Writer Serial Port**. Follow steps 4-7 to install the drivers.

---

Article ID: 7

Last updated: 03 Sep, 2015

Revision: 10

Writers -> Diamante/Wave -> Installing Stenograph Writer Drivers in Case CATalyst

<http://www.stenographsolutions.com/solution/index.php?View=entry&EntryID=7>